



Instructions:  
(Version August 2024)  
**STRAIGHT LADDER**

# Tango and Icarus (All Sizes) Assembly Instructions

**Assembly Instructions**  
**IMPORTANT – READ CAREFULLY –**  
**RETAIN FOR FUTURE REFERENCE**

## Safety First !

The top surface of the mattress must not be above the line ,marked on the frame (Maximum height: 20cm). The size of the mattress required is detailed below:

Standard 3ft Single, Standard Length - Mattress size 90cm by 190cm  
Small 3ft Single, Standard Length - Mattress size 75cm by 190cm  
Standard 2ft 6 Single, Short Length - Mattress size 90cm by 160cm  
Small 2ft 6 Single, Short Length - Mattress size 75cm by 160cm  
Small 4ft Double, Standard length - Mattress size 120cm by 190cm  
Standard 4ft 6 Double, Standard Length - Mattress size 137cm by 190cm



High beds and the upper bed of a bunk bed are not suitable for children under six years due to risk of injury from falls.

Be aware of the danger of young children (under 6) falling from upper bunk.

Beds should not be used if any structural part is broken or missing.

Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags.

Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (eg cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75mm or shall be more than 230mm.

Always ensure that guardrails, ladder and other components are maintained in the proper position and free from damage, and all the screw fixings tight.

Always use the ladder for entering and leaving the upper bunk.

Do not allow horseplay on or under the bed and prohibit jumping on the bed.

Use a nightlight as an added safety precaution for persons under the upper bunk.

Use guardrails on both sides of the upper bunk.

Every bedroom must have at least one opening window. Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed.
















The bed complies with BS EN 747-1: 2012+A1 :2015 safety standards

**IMPORTANT: DO NOT DISPOSE** of the packaging until you are satisfied with your purchase.. Please keep all cardboard until fully satisfied.



## Fixing List

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than required. These are universal instructions so some fixings have different QTY's depending on size, ie single or double sizes.

	<b>Fixing A1</b> Small sachet of glue for bolts B & C (NOT dowels) Number Required	1		<b>Fixing H</b> 90mm ladder silver hook To connect ladder to bunk Number required	2
	<b>Fixing A2</b> 70mm wooden rail or base slat spacer Number Required	1		<b>Fixing J</b> 35mm gold bracket Used to hold centre rails Single Size Model requires Double Size Model requires	2 4
	<b>Fixing A</b> 40mm by 10mm Wooden Dowel Used to connect parts Number required -	51		<b>Fixing K</b> Allen Key To connect bolts Number Required	1
	<b>Fixing B</b> 14mm Barrel bolt/Nut Used to connect with bolt C Single Size Model requires Double Size Model requires	4 12		<b>Fixing L</b> Small silver 15mm screw Single Size Model requires Double Size Model requires	16 20
	<b>Fixing C</b> 90mm Connector bolt Used to connect with bolt B Single Size Model requires Double Size Model requires	4 12			
	<b>Fixing D</b> 90mm Conformat Bolt Used to connect headboards Single Size Model requires Double Size Model requires	19 11		<b>Fixing P</b> 39mm Large Corner Bracket To bunk bed to wall Number Required	2
	<b>Fixing E</b> 30mm silver Screw Used to attach base slats and part 5 Number required	36		<b>Fixing Q</b> Black screw Number Required	6
	<b>Fixing F</b> 50mm Conformat Bolt Used to attach ladder steps Number required	20		<b>White Plastic caps</b> To plug spare ladder holes Large Small	6 3

In the rare event you are short of fixings you can order free of charge at [www.strictlyhelpdesk.co.uk](http://www.strictlyhelpdesk.co.uk)

## CUSTOMER CARE

We have checked all parts to ensure they are free of damage. However timber is a natural, living product. Occasionally timber can still be adjusting to humidity, for this reason a crack or stretch mark may appear after the product has been packaged.



Strictly Beds and Bunks however have a FREE PARTS REQUEST service in this unlikely event. You need to order a part please go to

Aftersales Portal - [www.strictlyaftersales.co.uk](http://www.strictlyaftersales.co.uk)  
Email Assistance: [help@strictlybedsandbunks.co.uk](mailto:help@strictlybedsandbunks.co.uk)



## SAFETY NOTICE: WOODEN FLOORS

This bed uses support legs to ensure heavy duty use. If you are locating this bed on a laminate or wooden floor the bed may move/slip when in use. This movement may dislodge the support legs. You must therefore attach non-slip pads under each corner post to prevent this movement. These also protect your floor. You can scan this QR Code for details on how to purchase these.

# TOP TIPS - TOP TIPS

## Read before you start assembly



### Locating the Dowel Rods

To keep the bed from rattling all the dowel holes have been slightly mis-drilled by a couple of mm. When you push parts together the dowels will straighten and pull together to ensure a tight fit. Whenever you locate a dowel on the hole NEVER push it all the way in, leave it so it is loose and can be aligned with the second locating hole.

Push them all the way in and they will not line up.



### GLUE SACHET INCLUDED

We have included a sachet of glue.

THIS IS NOT TO BE USED with the dowel rods.



Open the sachet and empty into a plastic container. Whenever you connect a confirmat bolt (D) or a connector bolt (B) into a barrel bolt (c) dip the end of the bolt in the wood glue and screw in as normal. This will act as a lock tight and prevent the bolt from working loose.



### Clean out the Pre-drilled Holes

You have brought a solid pine product. During the drilling process there may be sawdust still in the holes.

BEFORE you start assembly clear these holes with one of the bolts. Push the bolt through each hole, this will dislodge any sawdust or debris that could interfere with fixing the bed.

### Applying a Finish to the Beds

The bed can be used in a natural form. However if you are applying a stain or finish we advise that you build the bed first. When you are happy with your purchase then put a sheet under the product and apply your stain/paint to the manufacturers recommendations.

NOTE: we are unable to accept the return, under any circumstance once a finish has been applied. By painting the bed you have deemed to accept the quality.



### Corner Posts -

Make sure the WHITE Mark is facing upwards when laid on the floor

Headboard Facias-

These are colour coded

Please position as follows:

RED - At the top

WHITE - In the middle

BLUE - At the bottom



# Parts Identifier



Part BS - PACK of 12 Base Slats

Part 6- Front Top Long Guard Rail

Part 7- Front Bottom Long Guard Rail

Part 11A - End Guard Rail support

Part 20- Celeste Ladder Struts

Part 13- Blue Headboard

Part 14- White Headboard

Part 15- Red Headboard

Part 4- Ladder Steps

Part LCP - Left Hand Corner Post

Part RCP - Right Hand Corner Post

Part 1- Long Side rail

Part 16- Long Centre Rail

Part 2 - RED Top Back Guard Rail

Part 3- WHITE Bottom Back Guard Rail

Part 17- BLACK Back Bottom support Brace

Part 5 - Guard rail Support

Part 20 -Long Ladder Strut

Part 21 - Short Ladder Strut

Part 25/31 - Ladder Support Strut

## Consult Box Contents list for QTY




**Need Help Assembling This Product?**

We have some videos online that may help you. Please scan this barcode using your phone or visit [www.strictlybedsandbunks.co.uk/assemblyhelp](http://www.strictlybedsandbunks.co.uk/assemblyhelp)



# How to identify your parts and fixings

All our products have four attachment methods. These are colour coded, at the end of each part you will find a marker pen marking either RED, WHITE or BLUE (two types)

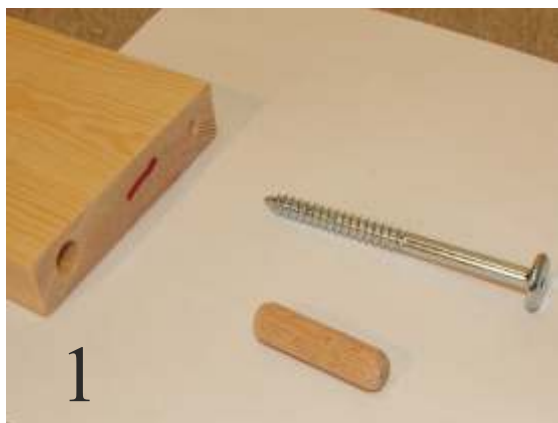

## RED MARKING/FIXINGS


The part will have a red marker pen marking on the end.

Hole / Bolt configuration:

One large dowel hole - Place for large dowel  
One small hole - Place for large 90cm confirmation bolt D

Areas this method is used:

Top front and back guard rails and top headboard facia

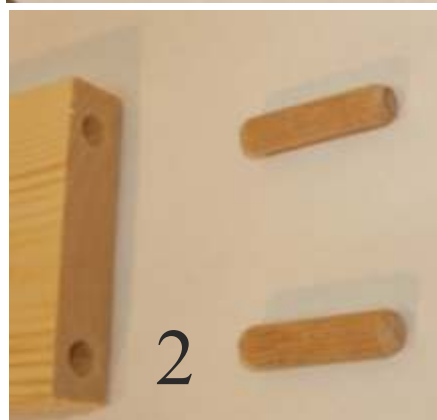

## WHITE MARKING/FIXINGS


The part will have a white chalk marking on the end.

Hole / Bolt configuration:

TWO large dowel holes - Place for large dowel

Areas this method is used:

Bottom front and back guard rails and centre headboard facia

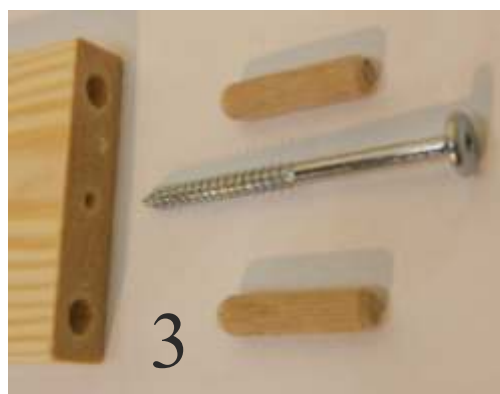

## BLUE MARKING/FIXINGS


**\*\*SINGLE BEDS (2ft 6 or 3ft) ONLY\*\***

(see below for Double 4ft or 4ft 6 models

The part will have a blue marker pen marking on the end.

Hole / Bolt configuration:

TWO large dowel holes - Place for large dowel  
One small centre hole - Place for large 90mm connector bolt D

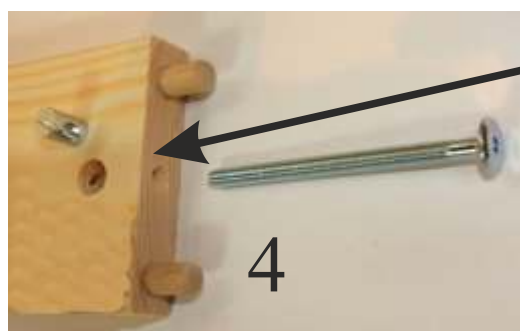


## BLUE MARKING/FIXINGS

**\*\* Double Beds 4ft, 4ft 6 , ONLY\*\***

The part will have a blue marker pen marking on the end.

Hole / Bolt configuration:

TWO large dowel holes - Place for large dowel  
One small centre hole - Place for large 90mm connector bolt C  
Facing access hole - Place for barrel bolt B bolt

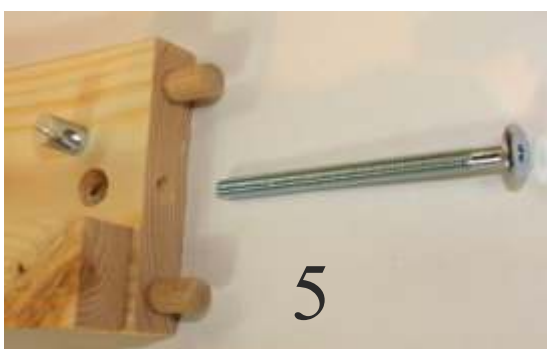


## SIDE RAIL MARKING/FIXINGS

The part will have a blue marker pen marking on the end.

Hole / Bolt configuration:

TWO large dowel holes - Place for large dowel  
One small centre hole - Place for large 90mm connector bolt C  
Facing access hole - Place for barrel bolt B

# Build the Headboards

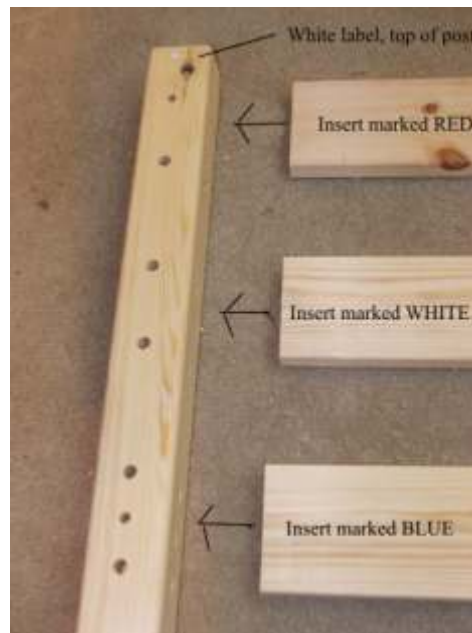

We need to build the two headboards at either end of the bunk bed. You will find four corner posts, On the **BOTTOM** of the post they will be marked with an end letter “L” and “R” (left and right)

Select one left (L) post and place to the left, and one right (R) and place to the right. **You will note a white chalk mark** on each post, very important. **THESE MUST BE AT THE TOP AND FACING YOU.** This indicates the top of each post and the row of holes that accepts the side/ guard rails.

You will have four headboard inserts per headboard. These are colour coded at the end in marker pen. In order from the top

- Part 15 Red (see page 5, FIG 1 for fixings)
- Part 14 White (see page 5, FIG 2 for fixings)
- Part 13 Blue (see page 5, FIG 3 or 4 for fixings)
- Part 13 Blue (see page 5, FIG 3 or 4 for fixings)

**Remember, the headboard inserts have different connections depending on the size. Double check page 5, 2ft 6 and 3ft bunks use bolts “D”, 4ft and 4ft 6 use bolts B&C.**

Dip each fixing (not dowels) into the glue before fixing..



## Locating the Dowel Rods

To keep the bed from rattling all the dowel holes have been slightly mis-drilled by a couple of mm. When you push parts together the dowels will straighten and pull together to ensure a tight fit. Whenever you locate a dowel on the hole **NEVER** push it all the way in, leave it so it is loose and can be aligned with the second locating hole. Push them all the way in and they will not line up.





## We now need to attach the rear guard rails and top side rail

With the help of a second person stand both the headboards up. The white **CHALK MARKINGS** must be facing inwards ready to attach the guard and side rails. You need to attach the side rail only first, this helps the frame stand still before fitting the guard rails and bottom brace part 17.

Shown in PIC 5 on page 5. **DO NOT TIGHTEN THESE YET**, simply attach the bolts but leave loose until you have attached the guard rails.



RED

WHITE

1

## Now we need to attach the back guard rails, these go at the very top.

Top Guard Rail, part 2 - Marked RED  
(fixing, see PIC1 on page 5)

Bottom Guard Rail, part 3 - Marked WHITE  
(fixing, see PIC2 on page 5)

Please note the mattress safety notice **MUST** be facing inside the bunk and not upside down. Once the guard rails have been attached now tighten **ALL** the fixings..

## Attach bottom back support brace



The bottom rear of the bed requires a Bottom rear brace (Part 17) to prevent the legs from moving apart. This part is coloured coded, **BLACK** - Icarus models, **BLUE** - Tango models please attach at the same time you attach the top guard rails. Use **Fixings A and D**





## Now we Build the Ladder

Depending on your model we have two ladder types, slanted or straight .

If slanted model you will have two identical ladder struts\_ If Straight ladder, you will have two different size ladder struts.

At this stage it makes no difference, you need to attach the ladder steps. To prevent movement the ladder rungs need to be tight. The holes on the ladder struts have been mis- drilled by 2mm to ensure a tight fitting. Locate each ladder to the holes on the struts. Using the small confirmat bolt (Fixing F) dip them in the glue and push BOTH through the strut, you will note they will not quite meet the hole on the step.



To meet the holes on the step the bolts will be at an angle, this is correct. Locate these over to the holes and screw both the bolts in evenly. If you screw one in fully the second will not meet the hole, screw both in slowly until tight. DO NOT attach the ladder hooks yet.

**Before we go any further you need to decide where the ladder is to go, left or right.**

We need to mark the front side rail to position the ladder, follow below on where and how to mark for each side, left or right.

### Ladder to The Left Hand Side

From the INSIDE of the left corner post measure 40cm in and mark on the side rail. See PIC1

### Ladder to The Right Hand Side

From the INSIDE of the right corner post measure 40cm in and mark on the side rail. See PIC1



### Ladder to The Left Hand Side

From the INSIDE of the left corner post measure 40cm in and mark on the side rail. See PIC1

### Ladder to The Right Hand Side

From the INSIDE of the right corner post measure 40cm in and mark on the side rail. See PIC1

## Announcing Our Bed Installation Video Competition!

If you've recently purchased one of our solid pine bunk beds and documented your installation journey, we want to see it! Share your installation video with us, and you could win a fantastic prize of £100.

**Scan this QR code for more details**


**Win £100**





# Now Build the Ladder

First we need to attach the ladder hooks

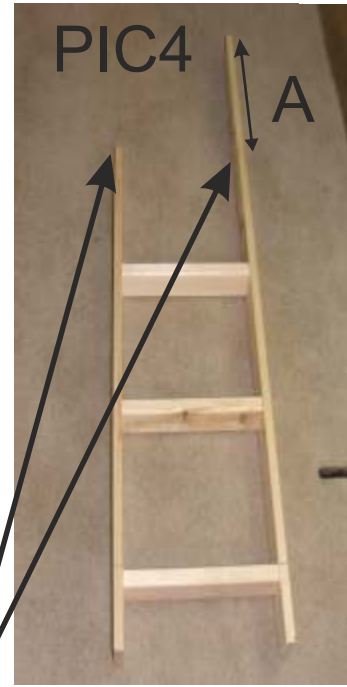

Now we have assembled the ladder we need to attach the two ladder hooks. If the ladder is going on the right side lay the ladder on the carpet as shown in PIC2, if left lay as shown in PIC1. (Note the position of the long strut). We are attaching two at the top. Now place a pencil mark 320mm down from the top of the long ladder strut. (PIC4, see A), the second hook goes at the very top of the small strut.

Ladder hooks here



## Fixing The Ladder to the Bunk.

Now you have attached the hooks you lift the ladder onto the bunk bed. Where you have marked the 40cm line you need to position the LONGEST strut so the clearance from the corner post to this strut is 40cm, ie the gap.



The Hooks are designed to be tight so will need to be pushed on, sometimes knocked down with a mallet. When in place you MUST fix in place with the small screw (L)



## Attach the front two guard rails

As before the top guard rail is marked Red and the bottom is marked WHITE.

It is important that we use the guard rail spacer bar.. We will start with the bottom white guard rail. Locate two dowels into the end. Place the space bar on the top of the side rail. Rest the guard rail on top of this.

Then using the long black screw and screw into the back of the ladder support (PIC3).

Now place the spacer on top of white rail and locate the top red. Again attach using the black screw.

We now screw another two black screws through the back of the side rail into the back of the ladder strut to fix to the bunkbed



**IMPORTANT:** The spacer bar must be used to ensure the correct, safe 70mm gap between each guard rail. DO NOT align without this.



## Attach Bottom Ladder Support Strut.

Now position Part 31 behind the ladder and connect to the corner post using fixings A & D. Once in place use Black Screw (Q) to screw through in the back of each ladder strut (no hooks are used for this). No pilot holes are located, the screws are self threading to ensure a tight fit



## Now we attach guard rail supports



These two rails prevent the guard rails from being forced apart, very important. Using a tape measure find the centre of the back guard rail and centre of the front guard rail. Make a small pencil mark. Then attach each guard rail support to the front using base slat screw (E) provided. These cover both the two guard rails and secure onto the side rail.

## Mattress Selection Available



Strictly Beds has a full range of mattresses to fit this bunk bed. This model has been designed to take a thicker 20cm mattress.

To go to our selection please type in  
[www.strictlybedsandbunks.co.uk/mattress](http://www.strictlybedsandbunks.co.uk/mattress)

Using the Camera on your phone, scan this barcode to take you to our mattress selection



## SAFETY NOTICE: WOODEN FLOORS

This bed uses support legs to ensure heavy duty use. If you are locating this bed on a laminate or wooden floor the bed may move/slip when in use. This movement may dislodge the support legs. You must therefore attach non-slip pads under each corner post to prevent this movement. These also protect your floor. You can scan this QR Code for details on how to purchase these.

## Attaching The Centre Rails

### SINGLE BUNK BEDS - One Centre Rail

From the inside of the bed we need to attach metal brackets, one either end. These are fixed using the small screws (L), these are fixed to part 13 (blue) - third insert down from the top. Using a tape mark a centre line from each corner post, then measure and mark **55mm** from the top of the BLUE Facia(13). Now position the top of the bracket (J) just below this mark, attach with the small screw (L). **The Centre Rail must be flush underneath the base slats**



### DOUBLE BUNK BEDS - Two Centre Rails

Same as above except with TWO centre rails. So, rather than mark one centre point we need to mark two. So, on part 13 Blue Facia

4ft Double Model - Mark two points 40cm from each corner post

4ft 6 Double Model - Mark two points 45cm from each corner post

Once the centre rail brackets are in place you can insert these before attaching the base slats. **Again the centre rails must be flush with the bottom of the base slats**

## We Now need to attach the base slats.

You will have twelve extra wide base slats. Push the first slat tight with the footboard corner posts, then using the base slat spacer block evenly space out the remaining base slats. **DO NOT SCREW IN PLACE YET.**

Now push the slats flush to the left hand side rail and screw in (do not screw the right hand side yet). Now go to the right hand side and start with the slat near the centre. Push the side rail in so the slat is flush, then fix using the screw. This aligns the side rail. Now fix the remaining base slats.



## IMPORTANT TIP.

The instruction above has told you to attach one side first, then **PUSH THE OPPOSITE siderail flush** to the base slat. If you do not follow this instruction the base slats **WILL NOT BE FLUSH** and you will think they are too short and try to order parts.

## Push Siderail until flush

# WRONG

Section : Added safety

# RIGHT

### Important Notice-

Due to the upright design of the ladder you may need to secure the bed to prevent wobbling when is use. This is not a design fault of the bed but a result of a front access ladder. If a floor is uneven, even by 1mm it can cause a bed to rock, again the brackets will stop this.

You can stabilise the bunk bed by attaching to the wall or to your wooden skirting board. Using the corner bracket fixing P locate to the rear corner posts under the side rail or at the base of the feet.

Using the base slat screws attach to the bed. Please note we have not supplied wall fixings due to the many fixing types available. Consult your hardware store for the best type.







# Extended Warranty

Available **Direct From the  
Manufacturer**



You don't have to have purchased the bed directly from us, so long as you purchase this warranty within 30 days of delivery you will be covered.

This warranty extension is only available on Strictly Beds and Bunks products. Scan the QR barcode for more details

Extend the warranty from 12 months to 36 months  
for a one-off payment from little as

**£19.99 (inc VAT)**



**Must Have Accessories  
Click QR Code for details**



## **Add-on Clothes Hanging Rail**

Attaches to the underside of your bunk bed.  
heavy duty chrome rail

**Only £34.95**



## **Add-on Storage Shelf**

Attaches to the side of  
your bunk bed

**Only £29.95**

